












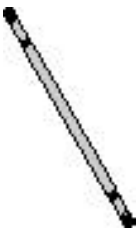


BARE SHAFT DESIGNS & APPLICATIONS

MANUFACTURER OF CONSTANT VELOCITY DRIVEAXLE COMPONENTS
1500 11TH AVENUE ROCKFORD, ILLINOIS 61104
PHONE (815) 962-1411 FAX (815) 962-4857

**GENUINE
ROCKFORD
CONSTANT VELOCITY**


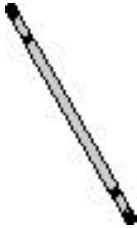
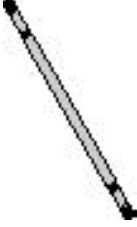









**164-31
to
213-31A**

<p>164-31 <u>-REPLACEMENT SHAFT</u> 1989-1990 Dodge Colt 1989-1990 Eagle Summit 1989-1990 Mitsubishi Mirage Left Side (RCV Axle #3225)</p> 	<p>195-31A <u>-CONVERSION SHAFT</u> 1989-1993 Galant 1990-1994 Eclipse, Laser, Talon 1993-1996 Colt, Mirage, Summit Right Side (RCV Axle #'s 3217, 3258)</p> 
<p>166-31 <u>-CONVERSION SHAFT</u> 1986-1990 Nissan Stanza Wagon 2WD Left Side (RCV Axle #3418)</p> 	<p>195-31PA <u>-CONVERSION SHAFT</u> 1990-1994 Mazda Protege DOHC Right Side (RCV Axle #3630)</p> 
<p>183-31 <u>-REPLACEMENT SHAFT</u> 1985-1989 Subaru Loyale (82 LAC) Both Sides (RCV Axle #3806)</p> 	<p>195-31PB <u>-CONVERSION SHAFT</u> 1995-1997 Kia Sephia 1990-1994 Mazda Protege Left Side (RCV Axle #'s 3629, 3631)</p> 
<p>183-31H <u>-REPLACEMENT SHAFT</u> 1990-1994 Hyundai Excel 1991-1992 Hyundai Scoupe 1990-1993 Mitsubishi Precis Right Side (RCV Axle #3503)</p> 	<p>195-31PC <u>-CONVERSION SHAFT</u> 1990-1994 Mazda Protege DOHC Right Side (RCV Axle #3640)</p> 
<p>183-31HA <u>-REPLACEMENT SHAFT</u> 1990-1994 Hyundai Excel 1991-1992 Hyundai Scoupe 1990-1993 Mitsubishi Precis Left Side (RCV Axle #3502)</p> 	<p>213-31 <u>-REPLACEMENT SHAFT</u> 1984-1986 Dodge Caravan 1984-1986 Dodge Ram Van 1984-1986 Plymouth Voyager Left Side (RCV Axle #2216)</p> 
<p>195-31 <u>-REPLACEMENT SHAFT</u> 1985-1993 Subaru Loyale (Marked 87 LAC) 1987-1991 Subaru XT (Marked 87 LAC) Both Sides (RCV Axle #'s 3803, 3811)</p> 	<p>213-31A <u>-REPLACEMENT SHAFT</u> 1984-1986 Dodge Caravan 1984-1986 Dodge Ram Van 1984-1986 Plymouth Voyager Right Side (RCV Axle #2217)</p> 

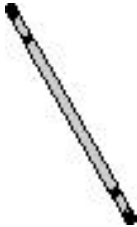Bare Shafts

**GENUINE
ROCKFORD
CONSTANT VELOCITY**

**214-31
to
625-31P**

<p>214-31 -CONVERSION SHAFT 1984-1986 Dodge Caravan 1984-1986 Dodge Ram Van 1984-1986 Plymouth Voyager Left Side (RCV Axle #2216)</p> 	<p>335-31 -REPLACEMENT SHAFT 1985-1992 Volkswagen Golf GTI 1985-1992 Volkswagen Jetta GLI Right Side (RCV Axle #3113)</p> 
<p>214-31A -CONVERSION SHAFT 1984-1986 Dodge Caravan 1984-1986 Dodge Ram Van 1984-1986 Plymouth Voyager Right Side (RCV Axle #2217)</p> 	<p>335-31A -REPLACEMENT SHAFT 1985-1992 Volkswagen Golf GTI 1985-1992 Volkswagen Jetta GLI Left Side (RCV Axle #3111)</p> 
<p>216-31 -REPLACEMENT SHAFT 1987-1990 Dodge Caravan 1987-1990 Dodge Ram Van 1987-1990 Plymouth Voyager Left Side (RCV Axle #2224)</p> 	<p>419-31BA-REPLACEMENT SHAFT 1990-1991 Chevrolet Astro Van 1985-1993 Ford Bronco II 1985-1993 Ford Ranger 1990-1991 GMC Safari Van Lineshaft (RCV Axle #'s 8300 & 8401)</p> 
<p>216-31A -REPLACEMENT SHAFT 1987-1990 Dodge Caravan 1987-1990 Dodge Ram Van 1987-1990 Plymouth Voyager Right Side (RCV Axle #2225)</p> 	<p>419-31BM-REPLACEMENT SHAFT 1985-1993 Ford Bronco II 1985-1993 Ford Ranger Lineshaft (RCV Axle #8301)</p> 
<p>216-31B -CONVERSION SHAFT 1987-1990 Dodge Dakota Both Sides (RCV Axle #2230)</p> 	<p>440-31 -REPLACEMENT SHAFT 1988-1991 Buick Reatta W/Dampner 1988-1991 Buick Riviera W/Dampner 1989-1992 Cadillac Allante W/Dampner 1988-1988 Cadillac Deville W/Dampner 1988-1991 Cadillac Eldorado W/Dampner 1988-1988 Cadillac Fleetwood W/Dampner 1988-1991 Cadillac Seville W/Dampner 1988-1990 Oldsmobile Toronado W/Dampner Right Side (RCV Axle #2457)</p> 
<p>216-31D -REPLACEMENT SHAFT 1987-1990 Dodge Dakota Both Sides (RCV Axle #2230)</p> 	<p>625-31P -CONVERSION SHAFT 1990-1994 Mazda Protege SOHC Right Side (RCV Axle #3628)</p> 

Bare Shafts

**GENUINE
ROCKFORD
CONSTANT VELOCITY**

**700-31
to
916-31A**

700-31 -REPLACEMENT SHAFT
1967-1978 Cadillac Eldorado
1967-1978 Oldsmobile Toronado
Both Sides (RCV Axle #2400)



816-31 -CONVERSION SHAFT
1990-1996 Chevrolet Astro Van
1990-1996 GMC Safari Van
Right Side (RCV Axle #'s 2488)



713-31 -REPLACEMENT SHAFT
1984-1985 Ford Escort
1985-1985 Ford Exp
1984-1985 Ford Tempo
1985-1985 Mercury Lynx
1984-1985 Mercury Topaz
Right Side (RCV Axle #2314)



816-31A -REPLACEMENT SHAFT
1988-1997 Chevrolet 1500 4X4
1988-1997 Chevrolet 2500 4X4
Both Sides (RCV Axle #'s 2470 & 2489)



713-31S -REPLACEMENT SLEEVE
1984-1985 Ford Escort
1985-1985 Ford Exp
1984-1985 Ford Tempo
1985-1985 Mercury Lynx
1984-1985 Mercury Topaz
Right Side (RCV Axle #2314)

*Illustration
not available
at this time*

916-31 -CONVERSION SHAFT
1987-1990 Dodge Caravan
1987-1990 Dodge Ram Van
1987-1990 Plymouth Voyager
Left Side (RCV Axle #2224)



714-31 -REPLACEMENT SHAFT
1984-1985 Ford Escort
1984-1985 Ford Exp
1983-1985 Ford Tempo
1984-1985 Mercury Lynx
1983-1985 Mercury Topaz
Right Side (RCV Axle #'s 2314 & 2316)



916-31A -CONVERSION SHAFT
1987-1990 Dodge Caravan
1987-1990 Dodge Ram Van
1987-1990 Plymouth Voyager
Right Side (RCV Axle #2225)



714-31S -REPLACEMENT SHAFT
1984-1985 Ford Escort
1984-1985 Ford Exp
1983-1985 Ford Tempo
1984-1985 Mercury Lynx
1983-1985 Mercury Topaz
Right Side (RCV Axle #'s 2314 & 2316)

*Illustration
not available
at this time*

813-31 -REPLACEMENT SHAFT
1985-1992 Volkswagen Golf
1984-1992 Volkswagen Jetta
Right Side (RCV Axle #'s 3139)



Bare Shafts

**GENUINE
ROCKFORD
CONSTANT VELOCITY**

**Shaft
Information**

Sorted By <u>Part Number</u>				Sorted By <u>Bar Length</u>			
<i>Part #</i>	<i>Length</i>	<i>OB</i>	<i>IB</i>	<i>Part #</i>	<i>Length</i>	<i>OB</i>	<i>IB</i>
164-31	29	22	22	216-31D	13 13/16	32	27
166-31	14 1/4	25	27	216-31B	13 13/16	32	34
183-31	19 1/2	22	22	166-31	14 1/4	25	27
183-31H	15 3/4	22	22	916-31	15 3/8	29	29
183-31HA	27 1/4	22	22	216-31	15 3/8	32	25
195-31	19 1/2	23	23	816-31	15 3/8	35	34
195-31A	15 7/8	23	23	183-31H	15 3/4	22	22
195-31PA	18 1/4	28	25	816-31A	15 3/4	35	35
195-31PB	16 3/4	28	25	195-31A	15 7/8	23	23
195-31PC	15 7/8	28	25	195-31PC	15 7/8	28	25
213-31	16 3/4	23	23	213-31	16 3/4	23	23
213-31A	26 15/16	23	23	195-31PB	16 3/4	28	25
214-31	16 3/4	28	28	214-31	16 3/4	28	28
214-31A	26 15/16	28	28	335-31A	17	33	33
216-31	15 3/8	32	25	195-31PA	18 1/4	28	25
216-31A	26 3/4	32	25	440-31	18 1/4	32	32
216-31B	13 13/16	32	34	183-31	19 1/2	22	22
216-31D	13 13/16	32	27	195-31	19 1/2	23	23
335-31	26 1/4	33	33	700-31	19 1/2	31	31
335-31A	17	33	33	419-31BA	25 1/4	28	28
419-31BA	25 1/4	28	28	335-31	26 1/4	33	33
419-31BM	27 3/4	28	28	714-31	26 1/2	32	32
440-31	18 1/4	32	32	713-31	26 5/8	23	23
625-31P	27 3/4	28	22	813-31	26 5/8	33	33
700-31	19 1/2	31	31	916-31A	26 3/4	29	29
713-31	26 5/8	23	23	216-31A	26 3/4	32	25
714-31	26 1/2	32	32	213-31A	26 15/16	23	23
813-31	26 5/8	33	33	214-31A	26 15/16	28	28
816-31	15 3/8	35	34	183-31HA	27 1/4	22	22
816-31A	15 3/4	35	35	625-31P	27 3/4	28	22
916-31	15 3/8	29	29	419-31BM	27 3/4	28	28
916-31A	26 3/4	29	29	164-31	29	22	22

Bare Shafts

NEW BARE SHAFT NOTES:

APPLICATIONS

OVERALL LENGTH

OB TEETH

IB TEETH

PLEASE NOTIFY TECHNICAL DEPT. OF NEW APPLICATIONS AND PLEASE
TRY TO SUPPLY THE CRITICAL INFORMATION ABOVE.
PHONE (815)-962-1411 - FAX (815)-962-4857