















BOOT FLANGE DESIGNS & APPLICATIONS

MANUFACTURER OF CONSTANT VELOCITY DRIVEAXLE COMPONENTS
1500 11TH AVENUE ROCKFORD, ILLINOIS 61104
PHONE (815) 962-1411 FAX (815) 962-4857

**GENUINE
ROCKFORD
CONSTANT VELOCITY**



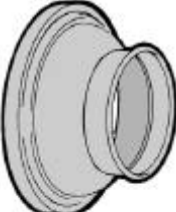









**176-3AS
to
216-65A**

| | |
|--|--|
| <p>176-3AS <u>-INBOARD BOOT FLANGE</u> 1990-1991 Lexus ES250 1988-1993 Toyota Camry 1988-1990 Toyota Celica</p>  | <p>214-15A <u>-INBOARD BOOT FLANGE</u> 1991-1993 Chrysler Lebaron 1991-1993 Dodge Caravan 1991-1993 Dodge Dynasty 1991-1995 Dodge Spirit 1991-1995 Plymouth Acclaim 1991-1993 Plymouth Voyager</p>  |
| <p>178-3AS <u>-INBOARD BOOT FLANGE</u> 1992-1996 Lexus ES300 1995-1996 Toyota Avalon 1990-1996 Toyota Camry</p>  | <p>215-65 <u>-INBOARD REPAIR SLEEVE</u> 1989-1990 Chrysler A Body* 1983-1988 Chrysler E Body* 1984-1986 Chrysler G Body* 1983-1990 Chrysler H Body* 1984-1986 Chrysler J Body* 1983-1989 Chrysler K Body* 1983-1990 Chrysler L Body* 1987-1990 Chrysler P Body*</p>  |
| <p>211-65 <u>-INBOARD REPAIR SLEEVE</u> 1982-1983 Chrysler K Body* 1979-1983 Chrysler L Body*</p>  | <p>215-65A <u>-INBOARD REPLACEMENT CAN</u> 1989-1990 Chrysler A Body* 1983-1988 Chrysler E Body* 1984-1986 Chrysler G Body* 1983-1990 Chrysler H Body* 1984-1986 Chrysler J Body* 1983-1989 Chrysler K Body* 1983-1990 Chrysler L Body* 1987-1990 Chrysler P Body*</p>  |
| <p>212-65 <u>-INBOARD REPAIR SLEEVE</u> 1983-1986 Chrysler E Body* 1981-1986 Chrysler K Body* 1981-1983 Chrysler L Body*</p>  | <p>216-15 <u>-INBOARD HOUSING CAP</u> 1987-1987 Chrysler E Body* 1987-1990 Chrysler G Body* 1987-1988 Chrysler H Body* 1987-1987 Chrysler K Body* 1987-1988 Chrysler P Body* 1991-1995 Chrysler S Body*</p>  |
| <p>213-15 <u>-INBOARD HOUSING CAP</u> 1982-1987 Chrysler E Body* 1984-1987 Chrysler G Body* 1985-1987 Chrysler H Body* 1984-1987 Chrysler J Body* 1981-1987 Chrysler K Body* 1985-1987 Chrysler L Body* 1987-1987 Chrysler P Body* 1984-1987 Chrysler S Body*</p>  | <p>216-65 <u>-INBOARD REPAIR SLEEVE</u> 1989-1991 Chrysler TC By Maserati 1989-1990 Chrysler A Body* 1988-1990 Chrysler C Body* 1988-1988 Chrysler E Body* 1988-1990 Chrysler G Body* 1988-1990 Chrysler H Body* 1988-1989 Chrysler K Body* 1988-1990 Chrysler P Body* 1987-1990 Chrysler S Body*</p>  |
| <p>214-15 <u>-INBOARD BOOT FLANGE</u> 1987-1990 Chrysler A, P Body* 1984-1989 Chrysler E, H, K Body* 1984-1986 Chrysler G, J Body* 1984-1996 Ford Escort, Exp, Tempo 1984-1994 Mercury Ln7, Lynx, Topaz 1991-1996 Mercury Tracer</p>  | <p>216-65A <u>-INBOARD REPLACEMENT CAN</u> 1989-1991 Chrysler TC By Maserati 1989-1990 Chrysler A Body* 1988-1990 Chrysler C Body* 1988-1988 Chrysler E Body* 1988-1990 Chrysler G Body* 1988-1990 Chrysler H Body* 1988-1989 Chrysler K Body* 1988-1990 Chrysler P Body* 1987-1990 Chrysler S Body*</p>  |

**Boot
Flanges**

**GENUINE
ROCKFORD
CONSTANT VELOCITY**

**220-3AS
to
712-4S**











| | |
|---|---|
| <p>220-3AS -OUTBOARD BOOT FLANGE</p>  <p>1987-1989 Mercedes 260E 1988-1989 Mercedes 300CE 1986-1993 Mercedes 300D 1986-1993 Mercedes 300E 1987-1987 Mercedes 300TD 1988-1993 Mercedes 300TE 1995-1995 Mercedes ES300D</p> | <p>335-4AS -INNER/OUTER BOOT FLANGE</p>  <p>1982-1990 Audi 80, 4000 1968-1979 Audi 100LS, 5000 1985-1990 Mercury Merkur 1977-1992 Porsche 924, 924s, 944 1980-1993 Volkswagen Cabriolet, Vanagon 1990-1997 Volkswagen Corrado, Passat 1984-1997 Volkswagen Golf, Jetta 1983-1988 Volkswagen Quantum, Scirocco 1966-1979 Volkswagen Transporter</p> |
| <p>220-4AS -INBOARD BOOT FLANGE</p>  <p>1987-1989 Mercedes 260E 1988-1989 Mercedes 300CE 1986-1993 Mercedes 300D 1986-1993 Mercedes 300E 1987-1987 Mercedes 300TD 1988-1993 Mercedes 300TE 1995-1995 Mercedes ES300D</p> | <p>336-5 -INNER/OUTER BOOT FLANGE</p>  <p>1988-1990 Audi 80, 90 1989-1991 Audi 100 1980-1988 Audi 5000 1985-1986 BMW 524 1985-1988 BMW 524, 528e, 535i, 535is 1985-1988 BMW 635 CSi 1987-1988 BMW M5, M6 1969-1975 Porsche 911, 930 1992-1994 Volkswagen Eurovan</p> |
| <p>275-15 -INBOARD BOOT FLANGE</p>  <p>1991-1995 Chrysler A Body* 1991-1993 Chrysler C Body* 1991-1995 Chrysler S Body* 1990-1992 Dodge Monaco 1988-1992 Eagle Premier</p> | <p>550-3AS -INBOARD BOOT FLANGE</p>  <p>1993-1997 Lexus GS 300 1990-1991 Lexus LS 400 1992-1997 Lexus SC 300 1992-1997 Lexus SC 400</p> |
| <p>280-4AS -INBOARD BOOT FLANGE</p>  <p>1982-1983 Datsun 280Z 1984-1988 Nissan 200SX 1984-1989 Nissan 300 ZX</p> | <p>550-4AS -OUTBOARD BOOT FLANGE</p>  <p>1993-1997 Lexus GS 300 1990-1991 Lexus LS 400 1992-1997 Lexus SC 300 1992-1997 Lexus SC 400</p> |
| <p>320-4AS -INNER/OUTER BOOT FLANGE</p>  <p>1984-1985 BMW 318i 1979-1983 BMW 320 1984-1988 BMW 325e</p> | <p>712-3S -INBOARD BOOT FLANGE</p>  <p>1988 Pontiac LeMans 1988 Pontiac Optima</p> |
| <p>320-AS -OUTBOARD BOOT FLANGE</p>  <p>1984-1985 BMW 318i 1984-1988 BMW 325e</p> | <p>712-4S -INBOARD BOOT FLANGE</p>  <p>1988-1993 Pontiac LeMans 1988-1993 Pontiac Optima</p> |

**Boot
Flanges**

*Chrysler body types & axle design information is located in the Reference Materials Section

**GENUINE
ROCKFORD
CONSTANT VELOCITY**

**713-15
to
813-4AS**

| | |
|--|--|
| <p>713-15 <u>-INBOARD HOUSING CAP</u> 1992-1994 AM-General Hummer 1981-1990 Ford Escort 1981-1985 Ford Exp 1984-1991 Ford Tempo 1981-1984 Mercury LN7 1981-1987 Mercury Lynx 1984-1991 Mercury Topaz</p>  | <p>716-15A <u>-OUTBOARD BOOT FLANGE</u> 1989-1997 Ford Thunderbird 1989-1997 Mercury Cougar</p>  |
| <p>714-15 <u>-INBOARD HOUSING CAP</u> 1989-1997 Ford Thunderbird 1989-1997 Mercury Cougar</p>  | <p>804-3AS <u>-INBOARD BOOT FLANGE</u> 1987-1992 BMW 318i 1987-1991 BMW 320i 1987-1991 BMW 320is 1985-1995 BMW 325i 1996-1997 BMW 328i 1987-1991 BMW M3</p>  |
| <p>714-4AS <u>-INBOARD BOOT FLANGE</u> 1989-1992 Lincoln Continental</p>  | <p>804-4AS <u>-OUTBOARD BOOT FLANGE</u> 1987-1992 BMW 318i 1987-1991 BMW 320i 1987-1991 BMW 320is 1985-1995 BMW 325i 1996-1997 BMW 328i 1987-1991 BMW M3</p>  |
| <p>715-15 <u>-INBOARD HOUSING CAP</u> 1986-1995 Ford Taurus 1988-1988 Lincoln Continental 1986-1995 Mercury Sable</p>  | <p>813-4AS <u>-INNER/OUTER BOOT FLANGE</u> 1975-1983 Audi 4000, Fox 1979-1982 Fiat Strada 1991-1997 Ford Aero Star 1978-1980 Ford Fiesta 1966-1976 Porsche 912, 914 1966-1981 Volkswagen Beetle, Dasher 1980-1992 Volkswagen Fox, Golf, Jetta 1982-1985 Volkswagen Quantum, Scirocco</p>  |
| <p>715-15A <u>-INBOARD BOOT FLANGE</u> 1992-1994 Ford Tempo 1992-1994 Mercury Topaz</p>  | |
| <p>716-15 <u>-INBOARD BOOT FLANGE</u> 1989-1997 Ford Thunderbird 1989-1997 Mercury Cougar</p>  | |

**Boot
Flanges**