



---

# *TRIPOD ASSEMBLY DESIGNS & APPLICATIONS*






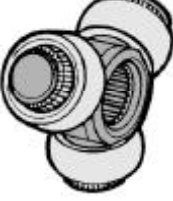






---

MANUFACTURER OF CONSTANT VELOCITY DRIVEAXLE COMPONENTS  
1500 11TH AVENUE ROCKFORD, ILLINOIS 61104  
PHONE (815) 962-1411 FAX (815) 962-4857

**GENUINE  
ROCKFORD  
CONSTANT VELOCITY**

**178-58  
to  
214-58**

**Tripod  
Assemblies**

<p><b>178-58</b> -<u>TRIPOD ASSEMBLY</u> 1995-1998 Ford Explorer 1997-1998 Mercury Mountaineer</p> 	<p><b>211-58</b> -<u>TRIPOD ASSEMBLY</u> 1978-1983 Chrysler (GKN Design) 1983-1987 Renault Alliance 1983-1987 Renault Encore 1983-1987 Renault GTA</p> 
<p><b>188-58</b> -<u>TRIPOD ASSEMBLY</u> 1986-1993 Acura Integra 1995-1997 Acura TL 1985-1996 Honda Accord 1985-1991 Honda Prelude</p> 	<p><b>212-58</b> -<u>TRIPOD ASSEMBLY</u> 1981-1986 Chrysler (GKN Design)</p> 
<p><b>188-58A</b> -<u>TRIPOD ASSEMBLY</u> 1990-1993 Acura Integra</p> 	<p><b>213-58</b> -<u>TRIPOD ASSEMBLY</u> 1981-1987 Chrysler (Citroen Design)</p> 
<p><b>189-58</b> -<u>TRIPOD ASSEMBLY</u> 1987-1990 Acura Legend 1992-1994 Acura Vigor</p> 	<p><b>213-58C</b> -<u>CONV. TRIPOD ASSEMBLY</u> 215-58 Tripod Rollers With 213-58 Splines</p> 
<p><b>189-58A</b> -<u>TRIPOD ASSEMBLY</u> 1997-1998 Acura 3.0CL 1994-1997 Acura Integra 1990-1997 Honda Accord 1993-1996 Honda Civic Del Sol 1992-1996 Honda Prelude</p> 	<p><b>213-58D</b> -<u>CONV. TRIPOD ASSEMBLY</u> 216-58A Tripod Rollers With 213-58 Splines</p> 
<p><b>195-58</b> -<u>TRIPOD ASSEMBLY</u> 1990-1991 Eagle Talon 1990-1994 Mazda Protege 1990-1992 Mitsubishi Eclipse 1990-1992 Mitsubishi Galant 1990-1991 Plymouth Laser</p> 	<p><b>214-58</b> -<u>TRIPOD ASSEMBLY</u> 1984-1990 Chrysler (ACI Design) 1992-1994 Ford Tempo 1992-1994 Mercury Topaz</p> 

**GENUINE  
ROCKFORD  
CONSTANT VELOCITY**

**214-58A  
to  
715-58**

**Tripod  
Assemblies**

**214-58A -TRIPOD ASSEMBLY**

1995-1998 Ford Contour  
1995-1998 Mercury Mystique



**441-58 -TRIPOD ASSEMBLY**

1991-1995 Chrysler (Saginaw Design)



**215-58 -TRIPOD ASSEMBLY**

1983-1990 Chrysler (GKN Design)  
1991-1995 Chrysler S Body (Rear)



**441-58C -CONV. TRIPOD ASSEMBLY**

216-58A Tripod Rollers  
With 441-58 Splines



**216-58 -TRIPOD ASSEMBLY**

1987-1990 Chrysler (GKN Design)  
1991-1995 Chrysler AWD S Body



**535-58 -FIXED TRIPOD ASSEMBLY**

1980-1988 Toyota Tercel

*Illustration  
not available  
at this time*

**216-58A -TRIPOD ASSEMBLY**

1991-1995 Chrysler (GKN Design)



**714-58 -TRIPOD ASSEMBLY**

1995-1998 Ford Windstar



**216-58C -CONV. TRIPOD ASSEMBLY**

216-58A Tripod Rollers  
With 216-58 Splines



**715-58 -TRIPOD ASSEMBLY**

1986-1993 Ford Taurus  
1986-1993 Mercury Sable



**271-58 -FIXED TRIPOD ASSEMBLY**

1978-1983 Datsun 720  
1982-1986 Nissan Stanza  
1980-1983 Renault 18i, Fuego  
1983-1987 Renault Alliance, Encore, GTA  
1975-1979 Renault Gordini Targa, R12  
1984-1986 Renault Sport Wagon

*Illustration  
not available  
at this time*

**715-58A -TRIPOD ASSEMBLY**

1992-1995 Ford Taurus  
1994-1994 Mercury Sable



**GENUINE  
ROCKFORD  
CONSTANT VELOCITY**

**715-58B  
to  
916-58A**

**Tripod  
Assemblies**

**715-58B -TRIPOD ASSEMBLY**

*1991-1993 Chrysler (Saginaw Design)*



**815-58 -TRIPOD ASSEMBLY**

*1982-1996 Chevrolet S-10, S-10 Blazer  
1991-1993 Dodge Dakota  
1980-1985 GM E, K Body  
1982-1996 GMC S15, S-15 Jimmy  
1991-1993 GMC Syclone, Typhoon  
1991-1996 Oldsmobile Bravada*



**915-58 -TRIPOD ASSEMBLY**

*1984-1996 GM W/Light Duty Axles*



**916-58 -TRIPOD ASSEMBLY**

*1987-1990 Chrysler (Saginaw Design)*



**916-58A -TRIPOD ASSEMBLY**

*1991-1995 Chrysler (Saginaw Design)*

